

TILT TABLE LAMP













 













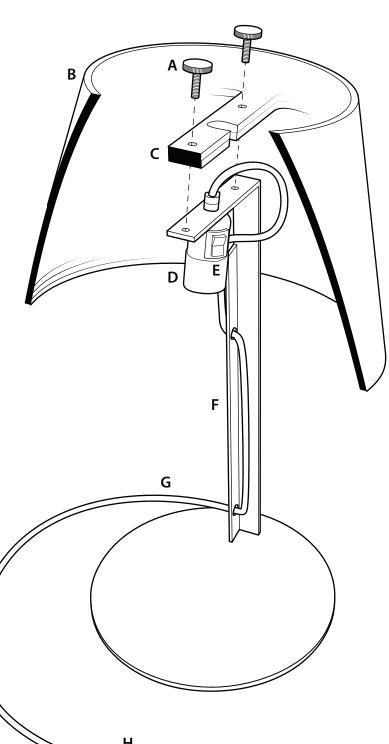

SETUP INSTRUCTIONS:

- 1 Carefully remove steel table lamp frame [F] and cardboard shade [B] from packaging.
- 2 Remove both thumbscrews [A] from their holes in the top
- 3 Place cardboard shade on top of frame, so that the center notch of the cardboard crossbar [C] fits around the electrical cord, and the two sets of holes align.
- 4 Secure cardboard shade to frame by twisting a thumbscrew into each hole.
- 5 Fit bulb in socket [D], being sure to abide by maximum wattage recommendations shown above.
- 6 Plug your table lamp into an outlet, being sure to keep flammable objects and materials away from electrical cord [G] and plug [H].
- 7 Turn your table lamp on an off using the power switch [E] on the socket.
- USAGE: Scraplights® cardboard shades should be kept away from damp or humid conditions. They are recommended for indoor use only.
- CLEANING: To clean dust from Scraplights® shade, spray with a can of compressed air. Avoid contact with water. To clean steel frame, wipe with a clean cloth.

Graypants warrants its products against defects in material or workmanship for a period of 90 days from delivery. Repair or replacement of the product is the exclusive remedy of the consumer. To obtain warranty service, you must deliver the product in its original packaging, or packaging affording an equal degree of protection, to Graypants' Seattle factory. This warranty does not cover damage arising from wear and tear, or any willful damage, negligence, subjection to abnormal working conditions, failure to follow the Seller's written instructions, misuse or alteration or repair of a product, or any other act or omission on the part of the consumer.