



w241 Faro Instructions


1.

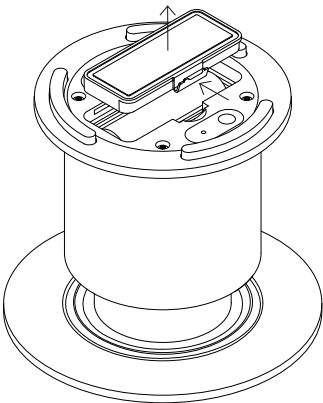


2.

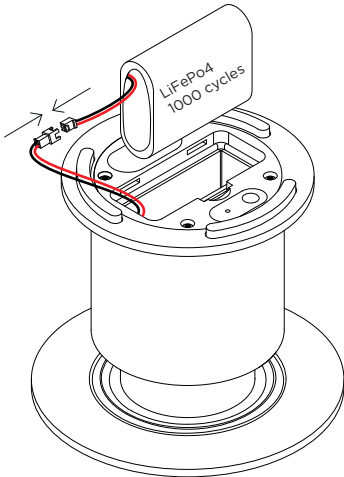


3.

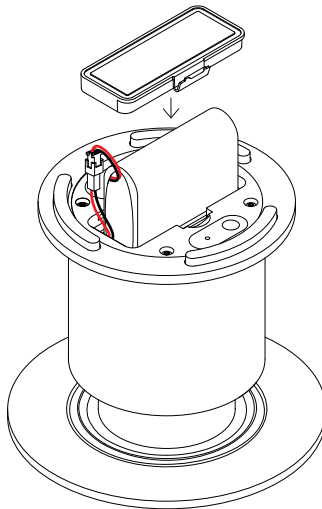


4.

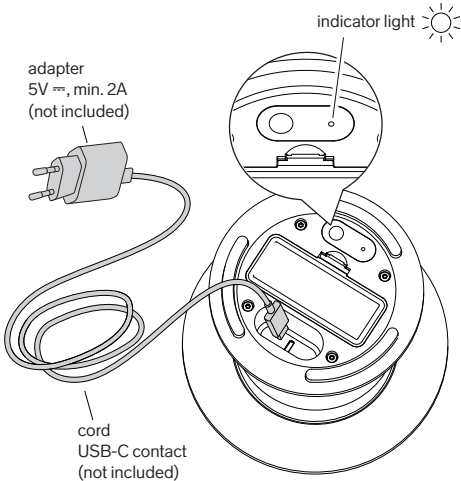

5.

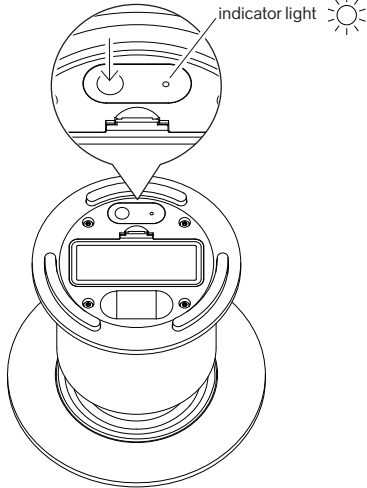

6.

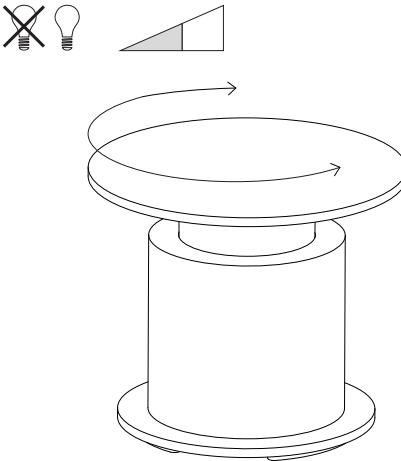


EN Mounting instructions

1. Remove the battery cover.
2. Take the battery out and connect the connectors.
3. Put the battery back in the luminaire and then add the connector with the narrow side down. Attach the battery cover.
4. Once the battery is connected, activate it by charging it once. For optimal performance, charge it to 100%. To charge the battery, connect a cord and adapter (not included). Indicator light during charging:

	
charging	fully charged (~4 hours)
5. Press the button for the battery level indication.

			
100-97%	97-50%	50-10%	10-0%
6. Rotate the top plate to turn the light on/off and to dim.







This product contains a light source of energy efficiency class D. The light source and control gear are replaceable by Wästberg or by a professional with explicit authorisation. Contact customer service at service@wastberg.com

Our product is specifically designed for indoor use, but it also offers limited outdoor application possibilities. However, it is important to avoid prolonged or extreme weather conditions to ensure the product's longevity and performance. Ambient temperature: 25°C.

w241 Faro

Battery sheet

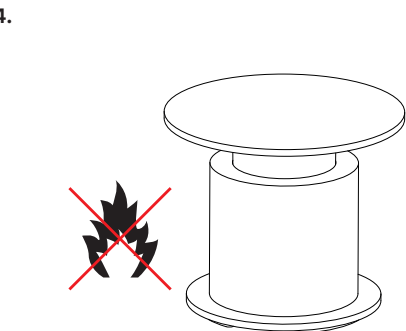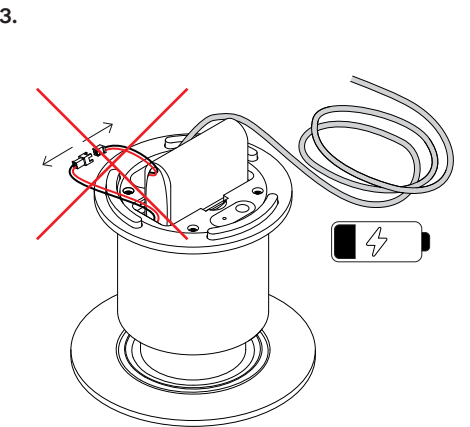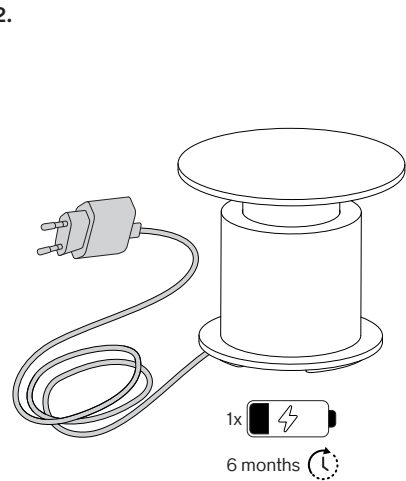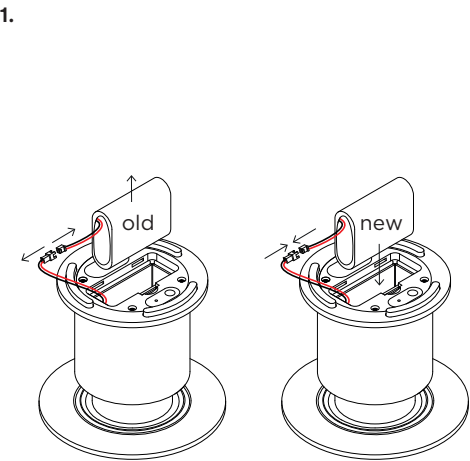

This device is not suitable for non-rechargeable batteries. Use only the designated Wästberg battery. Fire or explosion may result from use of incorrect battery. Keep batteries out of reach of children.

1. The battery can be removed and replaced. Only use the designated battery available for purchase from Wästberg. (LiFePo4, 9.6V, 2000mAh)
2. Charge at least once every six months to maintain the battery performance. If the luminaire is not in use, it must be charged once within 2 years.

The luminaire can be used during the charging process.

3. Do not disconnect the battery while charging as this might damage the battery or reduce its lifetime.
4. Do not expose the luminaire to fire or any other heat source.
5. Do not disassemble the battery.


6. It's recommended to charge the battery when the indicator light is red.



7. Battery life span:

Brightness level	100%	50%	25%
Battery life span	~7,5h	~14h	~20h

8. The luminaire is equipped with an RF module that enables connection to a master dimming device (not included).
Frequency range: 2400-2483.5MHz
RF output power: 7.5dBm



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To satisfy FCC&IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

w241 Faro Instructions


Page 3 / 4

Wästberg
Box 5085
200 71 Malmö
Sweden
wastberg.com


XAL Ltd.
477B & 478 The Arches,
Batemans Row
UK-London EC2A 3HH
wastberg.com




1.

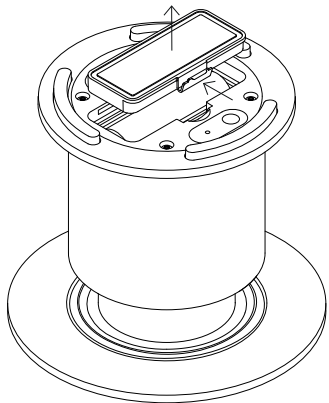


2.

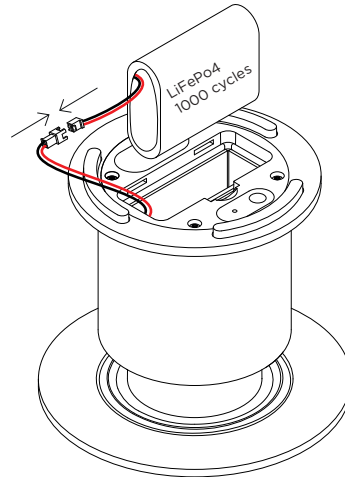


3.

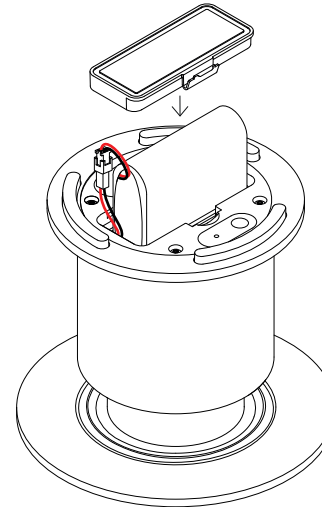


4.

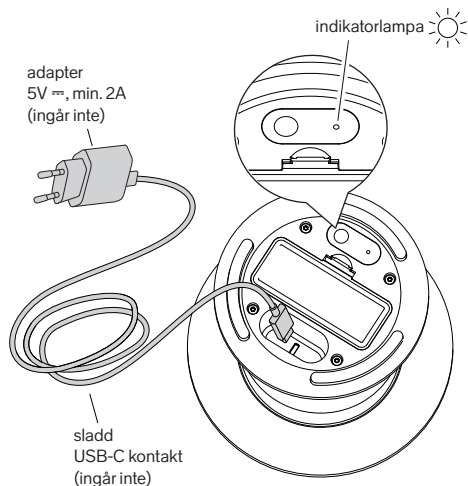

5.

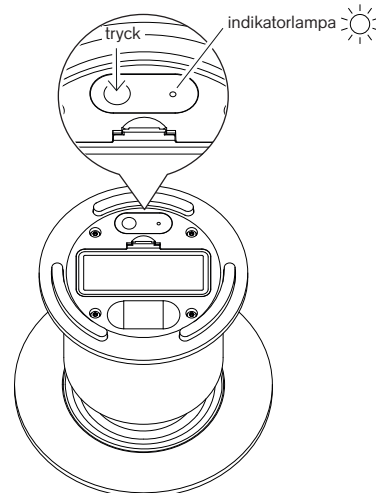

6.

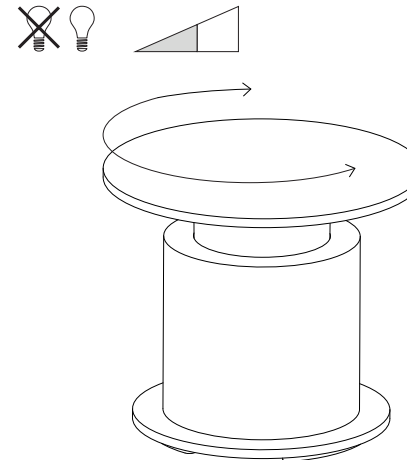

sv Monteringsanvisningar

1. Ta bort batteriluckan.

2. Ta ut batteriet och anslut kontakterna.

3. Sätt tillbaka batteriet i armaturen och sätt sedan in kontakten med den smala sidan nedåt. Sätt tillbaka batteriluckan.

4. När batteriet är anslutet aktiverar du det genom att ladda det en gång. För optimal prestanda laddar du det till 100 %. För att ladda batteriet ansluter du en sladd och adapter (ingår ej).


Indikatorlampa under laddning:

blinkar ((()))	konstant ((()))
laddning	fulladdad (~4 timmar)

5. Tryck på knappen för att visa batterinivån.

vit 	grön 	gul 	röd
100-97%	97-50%	50-10%	10-0%

6. Vrid den övre plattan för att tända/släcka lampan och för att dimra.



Denna produkt innehåller en ljuskälla i energieffektivitetsklass D. Ljuskällan kan bytas ut av Wästberg eller av en professionell med uttryckligt tillstånd. Batteriet kan bytas ut av slutanvändaren. För mer information, kontakta din lokala Wästberg-kundtjänst.


Vår produkt är speciellt utformad för inomhusbruk, men erbjuder även begränsade möjligheter till utomhusbruk. Det är dock viktigt att undvika långvariga eller extrema väderförhållanden för att säkerställa produktens livslängd och prestanda. Omgivningstemperatur: 25 °C.

October 2025


w241 Faro

Battery sheet


1.

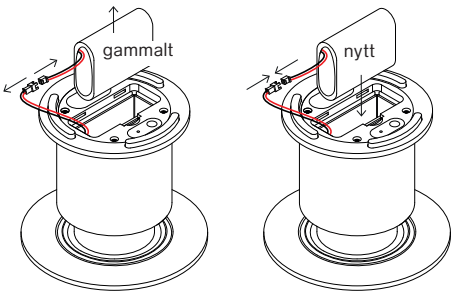


2.

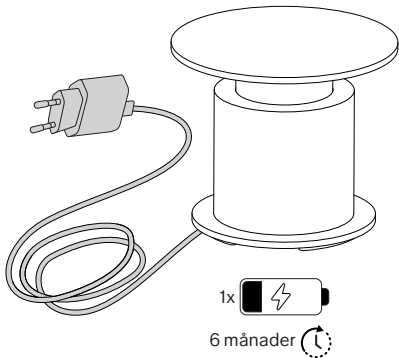

3.

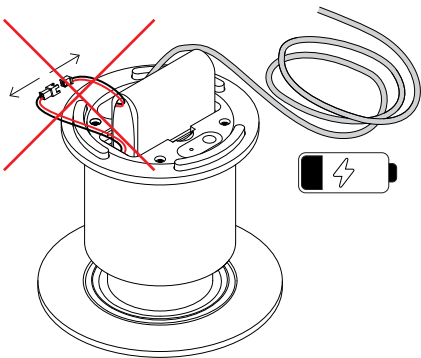

4.

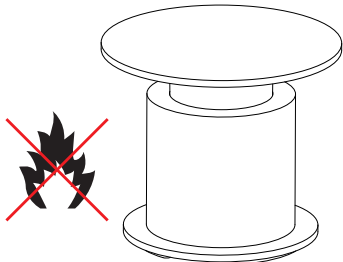

Denna enhet är inte lämplig för icke-uppladdningsbara batterier. Använd endast det avsedda Wästberg-batteriet. Felaktigt batteri kan orsaka brand eller explosion. Förvara batterier utom räckhåll för barn

1.

Batteriet kan tas bort och bytas ut. Använd endast det avsedda batteriet som kan köpas från Wästberg. (LiFePo4, 9.6V, 2000mAh)

2.

Ladda minst en gång var sjätte månad för att bibehålla batteriets prestanda. Om armaturen inte används måste den laddas en gång inom två år.

Armaturen kan användas under laddningen.

3.

Koppla inte bort batteriet under laddning, eftersom detta kan skada batteriet eller förkorta dess livslängd.

4.

Utsätt inte armaturen för eld eller andra värmekällor.

5.

Demontera inte batteriet.

6.

Det rekommenderas att ladda batteriet när indikatorlampan lyser rött.



7.

Batteriets livslängd:

ljusstyrka	100%	50%	25%
batteriets livslängd	~7,5h	~14h	~20h

8.

Armaturen är utrustad med en RF-modul som möjliggör anslutning till en huvuddimningsenhet (ingår ej).

Frekvensområde: 2400-2483.5MHz

RF uteffekt: 7.5dBm



Denna enhet uppfyller kraven i del 15 av FCC-reglerna. Användningen är föremål för följande två villkor: (1) Denna enhet får inte orsaka skadlig störning, och (2) denna enhet måste acceptera all störning som mottas, inklusive störning som kan orsaka oönskad drift.

Varning: Ändringar eller modifieringar av denna enhet som inte uttryckligen godkänts av den part som ansvarar för efterlevnaden kan ogiltigförklara användarens rätt att använda utrustningen.

OBS: Denna utrustning har testats och befunnits uppfylla gränsvärdena för en digital enhet av klass B, i enlighet med del 15 i FCC-reglerna. Dessa gränsvärden är utformade för att ge rimligt skydd mot skadlig störning i en bostadsinstallation. Denna utrustning genererar, använder och kan utstråla radiofrekvensenergi och kan, om den inte installeras och används i enlighet med instruktionerna, orsaka skadlig störning av radiokommunikation. Det finns dock ingen garanti för att störningar inte kommer att uppstå i en viss installation. Om denna utrustning orsakar skadlig störning av radio- eller tv-mottagning, vilket kan fastställas genom att stänga av och sätta på utrustningen, uppmanas användaren att försöka korrigera störningen genom en eller flera av följande åtgärder:

- Rikta om eller flytta mottagarantennen.
- Öka avståndet mellan utrustningen och mottagaren.
- Anslut utrustningen till ett uttag i en annan krets än den som mottagaren är ansluten till.
- Kontakta återförsäljaren eller en erfaren radio-/TV-tekniker för hjälp.

För att uppfylla FCC&IC:s krav på RF-exponering bör ett avstånd på minst 20 cm hållas mellan denna enhet och personer när enheten är i drift.

För att säkerställa efterlevnad rekommenderas inte användning på ett avstånd som är mindre än detta.